


2 Connect the NVR Through ONVIF

Once the wireless IPC and the wireless repeater is successfully matched and the camera is located in its place, enter the NVR's menu and search for the IPC in the "Add Camera" menu, then add the camera. (The camera's default port is 80).

The camera will auto-set its IP according to the NVR IP.

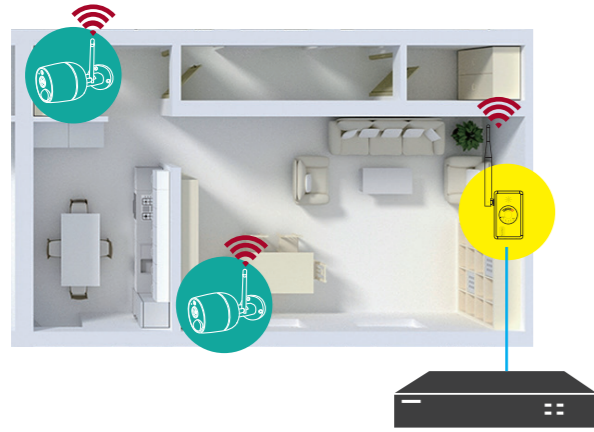

3 FAQ

Q: The wireless IPC image is not smooth and occasionally disappears. What to do?

A: The recommended distance between the wireless IPC to the Router is up to 15 meters. If you placed the camera in a distance longer than that, the signal may be weak. Try to avoid placing the camera in a location that is separated by thick walls. Obstacles between the repeater and the IPC can affect the signal strength as well.

Q: The pairing process failed. What can I do?

A: Verify the IPC is connected properly to the power and is working properly. During the pairing process, the distance between the camera and the repeater shouldn't be more than 5 meters.

If it didn't help, reset the IPC and the repeater, then start the pairing process again. Notice that the process can take up to 5 minutes until all the camera's are paired.

PROVISION ISR

Now you can see!



WR-04IPC / WR-01IPC

Connect your wired NVR with a Wireless IPC

Quick Instructions Guide


- No need to use LAN cable to connect your IPC
- Superior WiFi connectivity
- Supports 2.4G WiFi network
- Quick and easy pairing

3

正面

1 Product Appearance

- 1 Indicator light**---Indicates the signal status of the IPC/NVR.
- 2 Match Code/reset button**---press and hold it for 2 seconds to start the matching process. Press and hold for 10 seconds for full reset to factory default.
- 3 Speaker**---Prompts the voice indication.
- 4 DC Port**---Power input.
- 5 Network port**---Connect to NVR/Switch
- 6 Antenna**---Receives the IPC Signal.

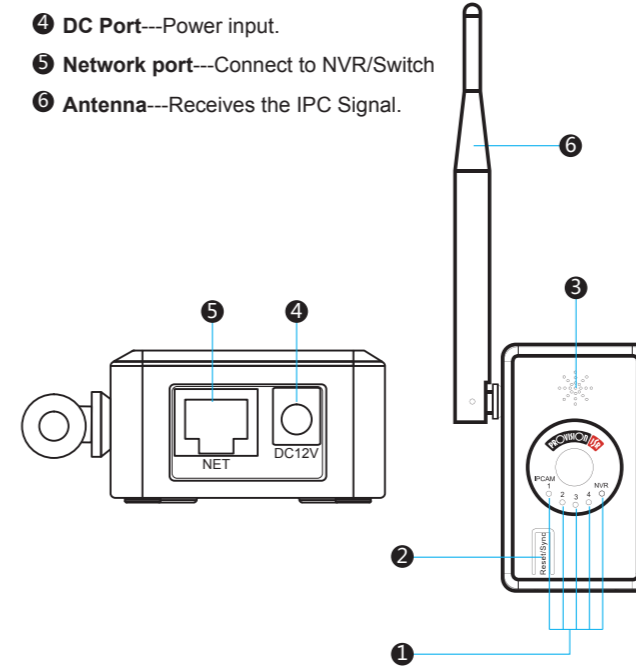

2 Dimension & Specification

WIFI	802.11b/g/n 2.4G	
Capacity	4 (1*) Wireless IPC	
LEDS	5 (2*) LED indicators, 4 (1*) IPC signal status, 1 LED for the NVR connection status.	
Interface	1 x RJ45 100Mbps network interface	Connection to the network
	1 x Match/Reset button	Press to match the IPC code or reset
	1 x 12V Power supply	Power supply for the router
Dimension	74 x 31 x 186 mm	

* For the WR-01IPC model


1

3 Operation Guide

1 Pairing a camera

- a. Connect the Wireless Repeater and the wireless IPC to the power.
- b. Use a network cable to connect the repeater to the switch. Verify that your NVR is connected to the same network.
- c. Press and hold the IPC's reset button for 10 second.
- d. Press and hold the repeater's match code button for 2 seconds.
- e. The repeater will prompt "WiFi code match is running".
- f. The matching process will start. After short time the cameras indication light(s) should turn green.
- g. After few min (up to 5 min) the wireless repeater will prompt "Matching Successful".
- h. Install the cameras in the desired location.

If the wireless router prompts "Matching failed", reset both the cameras and wireless router by press and hold the reset button for 10 second

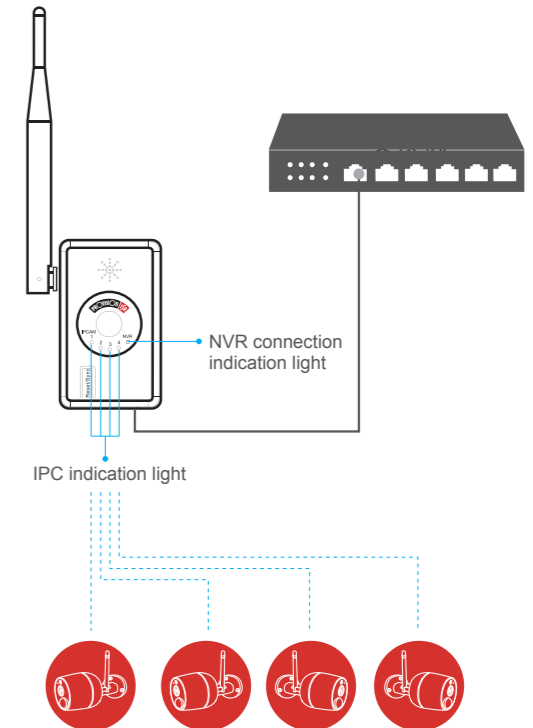

2

背面